

<b>INTRODUCTION</b> .....	9	<b>Chapter (10) Modelling Floor (Slab)</b> .....	51	24.4_Plan Region.....	153	<b>ADVANCE FEATURES</b> .....	245
<b>Chapter (1) What is Revit?</b> .....	9	10.1_Editing Floor.....	55	24.5_View Scale.....	155	<b>Chapter (32) Stacked Wall</b> .....	245
<b>Chapter (2) Revit's Terminologies</b> .....	9	10.2_Slab Edge.....	58	24.6_Detail Level.....	156	<b>Chapter (33) Structural Reinforcement</b> .....	251
2.1_Project.....	9	<b>Chapter (11) Placing Beam (Structural Framing)/ Bracing/ Beam System</b> .....	59	24.7_Visual Style/ Graphic Display Option.....	157	33.1_Rebar.....	252
2.2_Family.....	9	11.1_Beam.....	59	24.8_Crop Region/ Region Visible.....	157	33.2_Area Reinforcement.....	256
2.3_Level.....	11	11.2_Beam's Properties.....	61	24.9_Temporary Hide/ Isolate.....	159	33.3_Path Reinforcement.....	259
2.4_Revit Elements.....	12	11.3_Editing Beam (Steel, Precast, Timber Only).....	64	24.10_Hide/ Reveal Hidden Elements.....	162	33.4_Fabric Reinforcement (Fabric Area/ Fabric Sheet).....	260
2.5_Object Property.....	14	11.4_Bracing.....	65	24.11_Filter.....	164	33.5_Rebar Cover.....	263
<b>Chapter (3) File Extension</b> .....	16	11.5_Beam System.....	66	<b>Chapter (25) Views</b> .....	170	<b>Chapter (34) Phases</b> .....	266
3.1_Link or Importable/ Exportable File Extension.....	17	<b>Chapter (12) Roof</b> .....	72	25.1_Orthographic 3D View/ Perspective 3D View.....	170	<b>Chapter (35) Worksharing /Workset</b> .....	269
<b>Chapter (4) User Interface (UI)</b> .....	18	<b>Chapter (13) Truss</b> .....	80	25.2_Sections.....	174	<b>Chapter (36) Copy/ Monitor</b> .....	287
4.1_Application Button/ Application Menu.....	19	13.1_Editing Truss Profile.....	81	25.3_Elevations.....	175	<b>Chapter (37) Interference Check</b> .....	293
4.2_Tools.....	19	<b>Chapter (14) Pile and Pilecap (Foundation)</b> .....	84	25.4_Callout.....	175	<b>Chapter (38) Design Option</b> .....	295
4.3_Panel.....	20	<b>Chapter (15) Curtain Wall</b> .....	88	25.5_Drafting View.....	176	<b>APPENDIX</b> .....	304
4.4_Tab.....	20	15.1_Modifying Curtain System.....	92	25.6_Legend View.....	177	<b>Appendix (1) How to add Template file to the list at Start-up Page</b> .....	304
4.5_Ribbon.....	20	<b>Chapter (16) Doors/ Windows</b> .....	95	25.7_Duplicate View.....	178	<b>Appendix (2) How to generate plan view which already had level</b> .....	304
4.6_Quick Access Toolbars (QAT).....	21	<b>Chapter (17) Components</b> .....	96	<b>Chapter (26) Annotations</b> .....	182	<b>Appendix (3) How to duplicate Family Type</b> .....	305
4.7_Info Center.....	21	<b>Chapter (18) Stairs/ Ramp/ Railing</b> .....	98	26.1_Tag.....	182	<b>Appendix (4) How to load Families to the Project</b> .....	306
4.8_Contextual Tab.....	22	18.1_Stair.....	98	26.2_Beam Annotation.....	185	<b>Appendix (5) How to duplicate System Family Type</b> .....	307
4.9_Option Bar.....	22	18.2_Ramp.....	112	26.3_Spot Coordinate/ Spot Elevation/ Spot Slope.....	187	<b>Appendix (6) How to add New Parameter to the Schedules</b> .....	310
4.10_Type Selector.....	22	18.3_Railing.....	115	<b>Chapter (27) Schedules</b> .....	191	<b>Appendix (7) How to create View Template from Current View and apply it to Views</b> .....	311
4.11_Property Palette.....	23	<b>Chapter (19) Modify Tools</b> .....	124	<b>Chapter (28) Manage and Setting</b> .....	204	<b>Appendix (8) How to change Spot Elevation/ Coordinate Unit &amp; Origin</b> .....	313
4.12_Project Browser.....	24	<b>Chapter (20) Openings</b> .....	129	28.1_Material.....	204	<b>Appendix (9) How to duplicate and change Spot Slope Type</b> .....	314
4.13_Status Bar.....	25	<b>Chapter (21) Rooms</b> .....	133	28.2_Object Style.....	204	<b>Appendix (10) How to create New Project Parameter</b> .....	315
4.14_View Control Bar.....	25	<b>Chapter (22) Area Plan</b> .....	138	28.3_Snaps.....	205	<b>Appendix (11) How to customize Fill Pattern</b> .....	316
4.15_Drawing Area.....	25	<b>Chapter (23) Massing and Site</b> .....	139	28.4_Project Information.....	206	<b>Appendix (12) How to customize line pattern</b> .....	318
<b>MODELLING</b> .....	26	<b>PRESENTATION AND DOCUMENTATIONS</b> .....	146	28.5_Project Parameter/ Shared Parameter.....	207		
<b>Chapter (5) Startup Page</b> .....	26	<b>Chapter (24) View Control Tools</b> .....	146	28.6_Transfer Project Standard.....	210		
<b>Chapter (6) Creating Level</b> .....	27	24.1_Visibility Graphic Override.....	146	28.7_Purge Unused.....	211		
6.1_Editing Level.....	33	24.2_View Template.....	149	28.8_Fill Pattern.....	212		
<b>Chapter (7) Creating Grid</b> .....	35	24.3_View Range.....	152	28.9_Line Weight.....	213		
7.1_Modifying Grid.....	36			28.10_Line Pattern.....	214		
<b>Chapter (8) Placing Column</b> .....	39			28.11_Line Style.....	215		
8.1_Editing Column.....	42			28.12_Project Location.....	216		
<b>Chapter (9) Placing Wall</b> .....	45			28.13_Project Base Point/ Survey Point.....	219		
9.1_Editing Wall.....	48			<b>Chapter (29) Sheets</b> .....	225		
				<b>Chapter (30) Insert</b> .....	235		
				30.1_Links.....	235		
				30.2_Import.....	239		
				<b>Chapter (31) Export</b> .....	240		